

mini printer


迷你喷码机...

喷码机专业制造商


Professional manufacturer of inkjet printer

使用前请仔细阅读说明书
本说明书设计图文仅供参考，具体以实物为准
所有内容经审核校对，如有印刷错漏等情况，敬请谅解

Please read the manual before use
the picture is only for reference, please make the object as the standard
All contents have been audit checked. If there are any errors , please understand

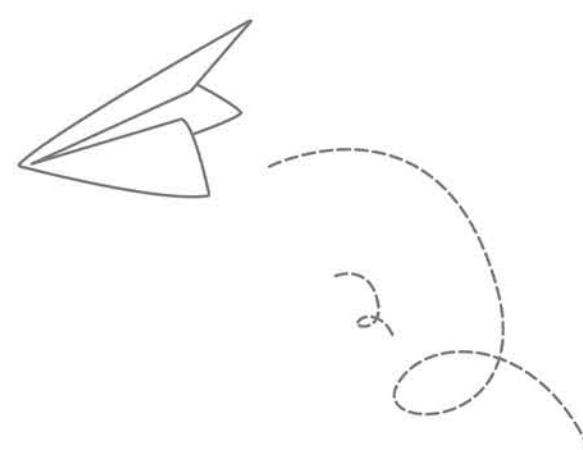

Parameter

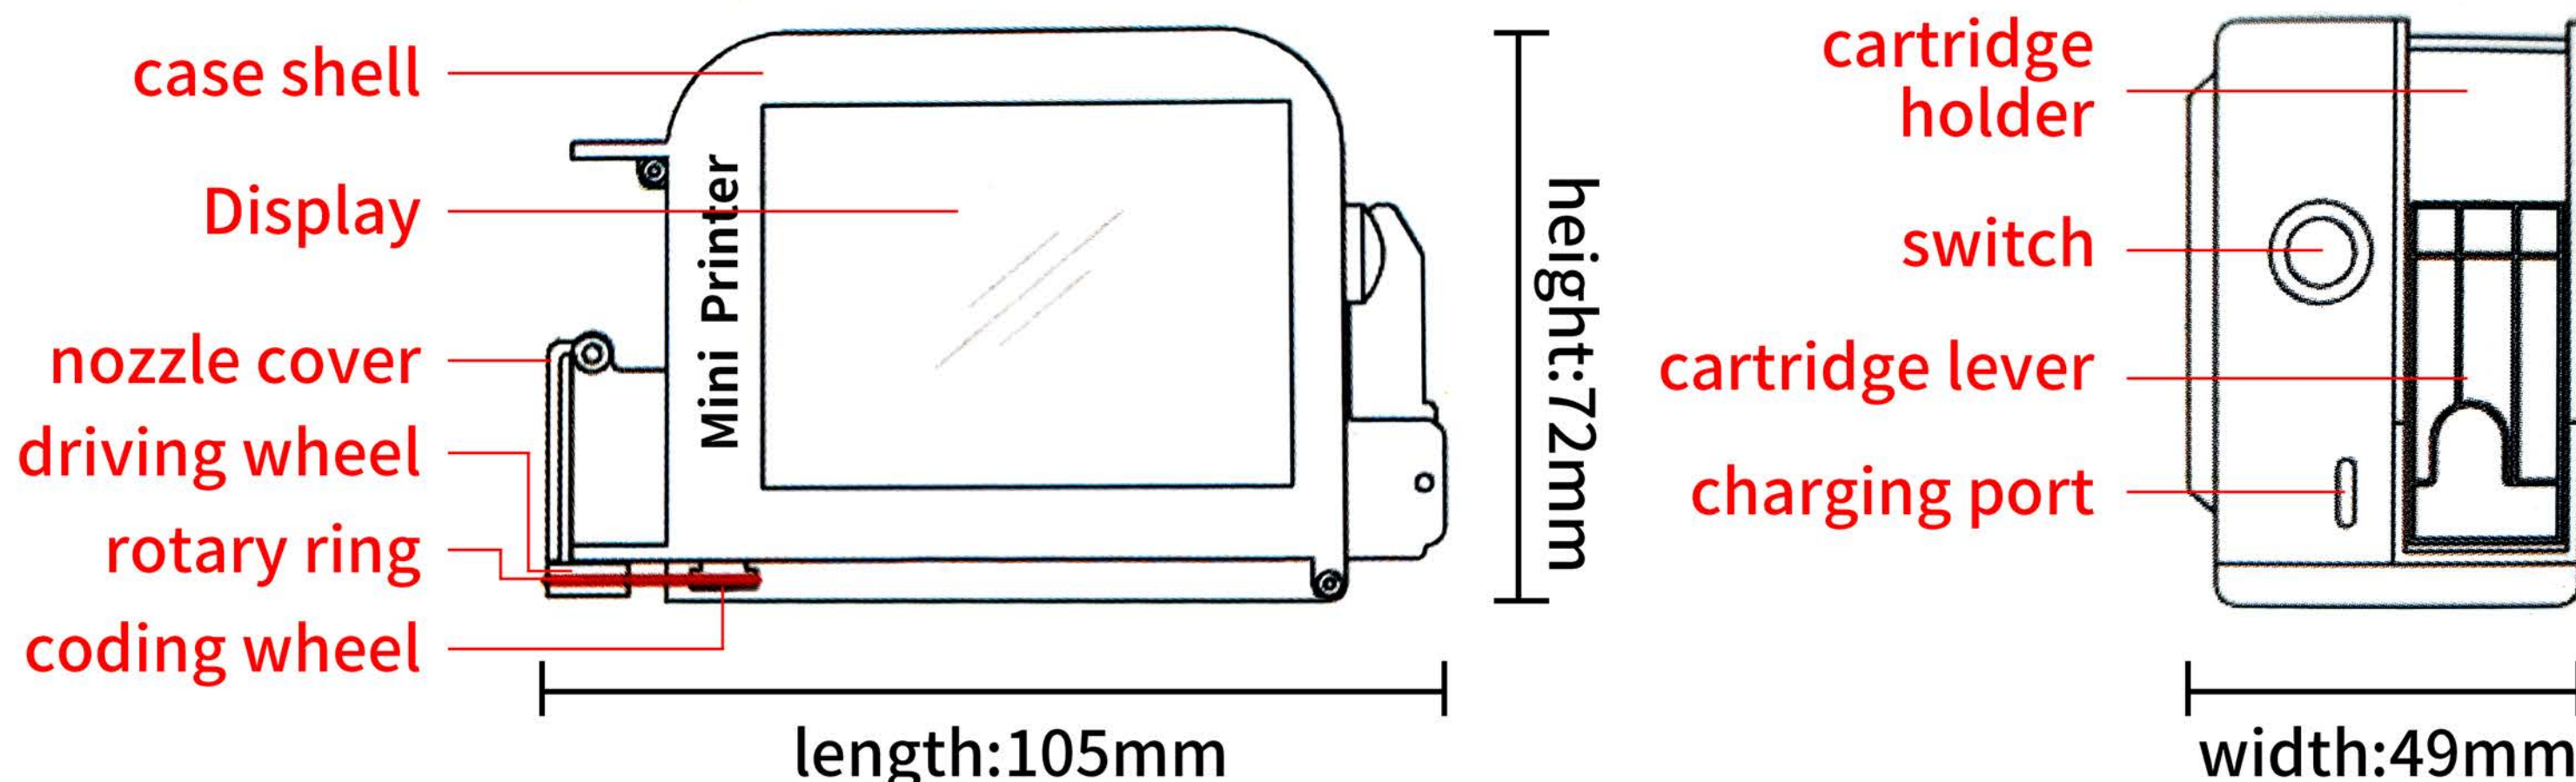

Product Name: Intelligent Mini printer

Information editing: Self-editing

Charging port: TYPE-C

Power input: DC-5V

Cartridge type: 12/25mm (print maximum height)

Maximum power: 20W

Power supply mode: adapter

Working weight: 280g

Appearance size: 105*72*49mm

Overview

New upgrade intelligent mini ink jet printer, using high-end industrial chips, support pictures, TXT files, Excel spreadsheet file one-click computer import. Built-in multi-language system and input method, support handwritten input, can be a variety of forms of content to generate graphics code, variable graphics code for inkjet operation, to meet the various needs of more customers.

The intelligent mini inkjet printer is a mini handheld inkjet printer. It has the characteristics of convenient carrying and stable performance.

It can be sprayed in curved surface / irregular / small size space. Cartons, plastic bags, steel pipes, cylinders, bottle caps, bottle bodies and curved surfaces can be sprayed.

The machine uses a quick-drying ink box with strong adhesion. The inkjet printer uses a 2.4-inch touch color screen, which can be edited by direct contact screen. The fuselage has its own storage function, import files and pictures so that the next printing in a timely manner to mobilize the printing code, printing more convenient.

Notice

★ Notes during installation

1. Insert and remove the cartridge at a 45 degree Angle. Do not use brute force to avoid damaging the metal stylus.
2. If there is too much dust in the working environment, it is strongly recommended to use an air compressor to remove the internal dust.
3. Insert or remove the cartridge only when the cartridge is powered off
4. When not use the machine for more than 5 minutes, must remove the ink cartridge from the machine and fasten it with a clip.

★ Precautions for Operation

1. The printing environment should be free of electrostatic strong magnetism.
2. When the printing effect is fuzzy, please make sure that the best printing distance between the nozzle and the sprayed item is within 5mm.
3. When ink trails appear in the printing, please gently wipe the surface of the cartridge nozzle with a special wiping paper.
4. If there is a lot of dust in the site, please use the air compressor gun to clean the dust on the surface and inside the cartridge every day when it is stopped.
5. If the ink-jet printer can not solve the problem, please contact the agent.

Frequently asked questions

★ When it can not print how to do ?

1. Reprint files.
2. check whether the synchronous wheel belt off.
3. Check whether there is ink in the cartridge.
4. check the parameters are correct.
5. Whether the power is sufficient, charge and spray again.
6. After closing the inkjet printer, reinstall the printing cartridge correctly.
7. Please check whether the ink cartridge has ink, ink cartridge is well installed.
8. Please check whether there is debris on the surface of the nozzle, if any, please gently wipe clean with tissue paper.

★ can print it, but not clear

1. Check the surface of the nozzle is clean, dry, with a special wipe carefully clean nozzle surface.
2. When the inkjet printer is not printed, take out the ink cartridge, the nozzle shakes down several times, sticks the paper towel on the surface of the nozzle, and shakes up and down.
3. After cleaning the nozzle with cleaning solution, fully dry.
4. The above operation is still unable to solve, please replace the cartridge.

Main Page Key Function Introduction



【Rotation】：Rotate the selection

【Mirror】：Mirror the selection

【 A+ 】：Enlarge the selection

【 A- 】：Zoom Selection Out

【 ▲ 】：Move Selection Up

【 ▼ 】：Move Selection Down

【 ◀ 】：Move Selection Left

【 ▶ 】：Move Selection Right

【 👁 】：Preview

【Add】： It can add various contents

【Delete】： Delete selected content

【Setting】： Setting machine printing parameters and conventional control methods

【File】： It contains load, new, save, save as, rename, find

【edit】： Can be modified to delete content

【Print】： Start printing

Add interface button function introduction



【Count】： Count function setting adjustment

【Form file】： can import external TXT, XLS files

【New table】： Add form

【Segmentation】： Set segmentation inkjet

【Picture】： can input pictures/Usb pictures
to the machine

【Graphic code】： editable add fixed barcode,
fixed two-dimensional code

【Common icons】： Common icons come with the machine

【Variable graphics code】： editable to add variable bar code, variable two-dimensional code

Setting



Main interface click [Settings] to enter the setting interface, as shown in the left figure, the machine printing parameters and conventional control methods can be adjusted.

(Note : professional settings do not arbitrarily transfer)

system language switching can be in [Settings] click [language selection] to switch, the machine comes with a multi-language system.

Text input

Main interface click [add] - [text] into the interface as shown in Figure 1-1, the text can be edited.

Click [text] after the box into the text editing interface, such as Figure 1-2, text input.



Figure 1-1



Figure 1-2

Input method switching, click **CH** the edit keyboard key to switch, as shown in Figure 1-3
Support handwritten input operation, click **/HW** the language interface key to enter, as shown in Figure 1-4



Figure 1-3



Figure 1-4

After editing, click the keyboard [confirm] key to return to the text interface, set the parameters click  to confirm the return to the main interface.

Click [print] to enter the print interface for printing operations, as shown in Figure 1-5

Click  Cancel Print



Figure 1-5

Editing date

Main interface Click [Add] key to select [date], enter the date editing interface, as shown in Figure 2-1, content adjustment
Click [date] after the box into the date mode interface, as shown in Figure 2-2, select the date style



Figure 2-1



Figure 2-2

Edit counter

Main interface Click [Add] key to select [Counter], enter the count editing interface, as shown in Figure 3-1, content adjustment
Click [date] after the box into the counter parameter adjustment interface, such as Figure 3-2, adjust the settings.



Figure 3-1



Figure 3-2

U disk input



With the data cable to connect the machine and computer, the machine main interface click [Settings] key to select [U disk], into the import interface. As shown in the left image, there will be a mobile disk [MINI] on the computer, and the files that need to be imported can be dragged into the disk. Can import pictures, TXT files, EXCEL files . (note : image format for BMP format, EXCEL file only supports.xls format).

Edit picture

The main interface click [add] key to select [picture], enter the picture interface, such as figure 4-1, select the imported picture, click [open] to enter the adjustment interface, such as figure 4-2, click  to return to the main interface after the setting is completed.



Figure 4-1



Figure 4-2

TXT, EXCEL file input

Main interface click [add] - [file table] into the interface as shown in Figure 5-1, you can edit the content to modify.
Click on the [form file] after the box into the interface as shown in Figure 5-2, select the file to be imported, click on [open]



Figure 5-1



Figure 5-2

Edit graphic code

The main interface click [add] - [graphics code], enter the graphics code interface, as shown in Figure 6-1, edit the content.
Click the box after [text], enter the text editing interface, enter the required content and click [confirm].
Click the box after [graphic code], enter the interface as Figure 6-2, and select the graphic code type.



Figure 6-1



Figure 6-2



Maintenance records and feedback

Note: The copy of this form is invalid

Customer Name:		Telephone Number:	
Order No. :	Purchase ID/		
	wechat account:		
Product Model:		Shop Purchase:	
Detailed Address:			
The repair date	Breakdown and maintenance		Operator
Suggest			
Our corporation support warranty services, free maintenance during the warranty period except for the wearing parts. Please pay attention! Any of the following circumstances are not within the scope of warranty 1. The warranty period specified in the warranty card is exceeded. 2. Damage caused by failure to use, maintain and keep the product according to the instructions. Those who do not have the warranty card removed by the maintenance party or alter the warranty card without authorization. 3, not responsible for the maintenance of the demolition. 4. Without the warranty card or alter the warranty card without authorization. 5. The model number on the warranty card is inconsistent with the actual product. 6. Caused by force majeure factor . 7. Other agreements are agreed upon. 8. The original ink cartridges of our factory are not used.			

合格证

产品型号: _____

产品规格: _____

生产日期: _____

检验日期: _____

本产品经检验符合标准要求

检验单位 (章)



检验员: _____

本说明书内所印各种文字说明如有更改, 恕不另行通知
我厂技术人员对本产品不断研究改进, 因此保留说明书更改权

All text descriptions printed in this manual are subject to change without notice.
Our technicians constantly study and improve this product, so we reserve the right to change the instructions